



## Missing dimensions refer to dimensional drawing

(1) For version with spindle protection tube, the plug element integrated into the connector hood has to be lifted by loosening the 4 fixing screws and inserted again shifted by 90° or 180°. The cable glands then point in direction of the motor or the position indicator.

Caution: Connecting cables must not touch the motor as the motor might become very hot at full load!

- Connector hoods for separate mounting
  Pipe mounting
- 2 Spindle protection tube (option)4 Wall mounting

sev7en